

THIS FILM MUST BE SQUEEGEED VERY THOROUGHLY

Application Guidelines For:
Heavy Gauge (Security Films)
Sputter Metalized Window Films

CAUTION: LOW M.V.T.R

Heavy gauge security films & sputtered films have the lowest MVTR (moisture vapor transmission rate) of all window films. It is imperative that the proper installation solution, proper squeegee and proper installation technique be used in order to evacuate as much water as possible during installation.


FAILURE TO FOLLOW THESE GUIDELINES MAY RESULT IN THE DEVELOPMENT OF "PATCH HAZE" A CONDITION CAUSED BY EXCESSIVE MOISTURE LEFT UNDER THE FILM DURING APPLICATION. THIS CAN CAUSE FOGGING AND WATER DEPOSITS THAT DO NOT DRY OUT.

Suggested Squeegees (Please see our online catalog)

- GT-062
- GT-064
- GT-042

Suggested Application Solution:

GT-735 (Film-On)
Do not apply these films with dishwashing soap

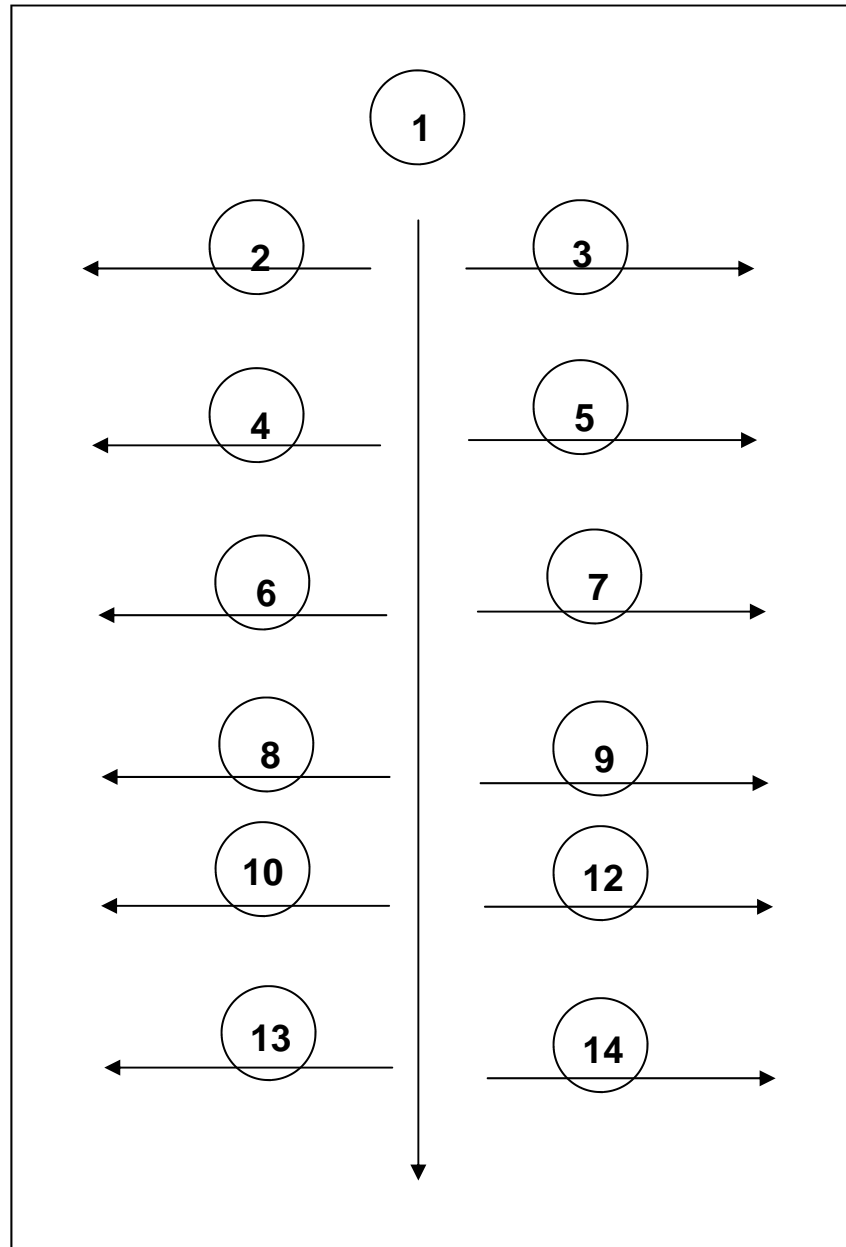

**Follow This Basic Pattern
Overlap Your Strokes
Repeat As Necessary**

Your objective is to remove as much of the application solution as possible during the installation of the film.

Any moisture left behind could take a very long time to dry. Some slight cloudiness is normal, but excessive amounts of water left under the film could cause the minor cloudiness to become severe.

In addition, leftover installation solution can form water pockets under the film which may not dry properly.

If you have questions about the application of this film, please call us before you start.

Express Window Films (800)345-6669